



HPV Nozzle Side Guard Kit Assembly Instructions (600035)

HPV Nozzle Side Guard Kit

Contents of Nozzle Side Guard Kit

1. Instructions (600704)
2. (2) Nozzle Side Guard (600164)
3. Hardware Bag (600512)

Includes:

- (4) Bolt, Flat Head SCS, 1/4 -20 X 0.5" lg. (600519)

Tools Required

1. 5/32 hex Allen wrench

Nozzle Side Guard Kit illustration is
available on the back of these instructions.

Assembly Instructions

1. Turn off engine and let it come to a complete stop.
2. Slide one Nozzle Side Guard over one side of the nozzle.
3. Secure side guard to nozzle with 1/2" lg. flat head bolts screwed into the threaded inserts on the nozzle sides.
4. Repeat on other side.

NOTE:

The Side Guards are made of zinc-plated steel. They are designed to reduce wear on the edge of the nozzle. The guards may scratch some surfaces; avoid contact with decorative brick and masonry surfaces.


WARNINGS:

Keep pets, animals, and children away from work area.
Turn off machine before attempting to clear clogs.


LITTLE WONDER®

HPV

High Performance Vac™

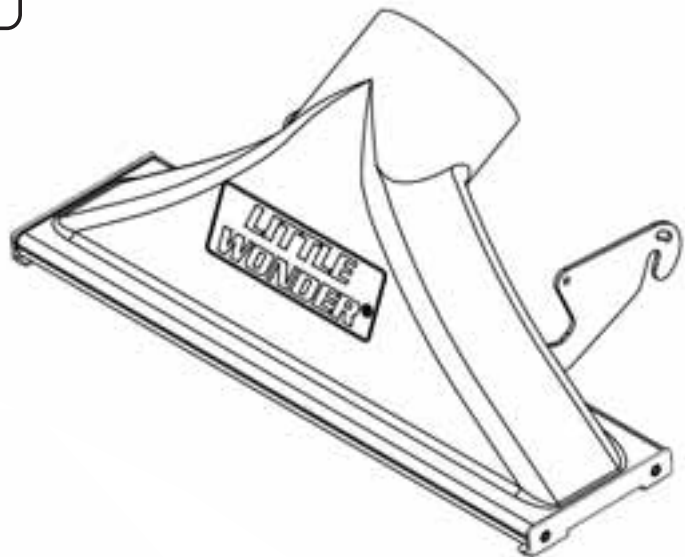

NOZZLE SIDE GUARD KIT
(P/N: 600035)

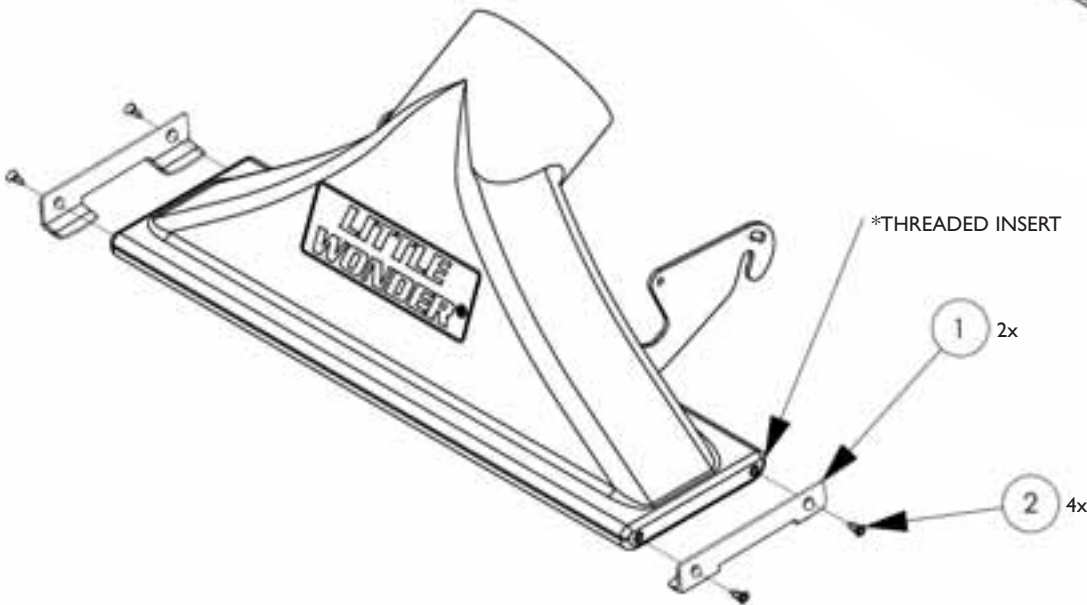

▲ WARNING ▲ DANGER ▲

DO NOT VACUUM WATER OR EXCESSIVELY WET MATERIAL. THIS MAY DAMAGE EQUIPMENT.

▲ WARNING ▲ DANGER ▲

DO NOT VACUUM LARGE OR HARD OBJECTS. DO NOT FORCE ANYTHING INTO VACUUM.

LITTLE WONDER®

DIVISION OF SCHILLER-PFEIFFER, INCORPORATED

1028 STREET ROAD, P.O. BOX 38

SOUTHAMPTON, PA 18966

PHONE 877-596-6337 • FAX 215-357-8045

877-LWONDER

www.littlewonder.com

P/N 600704 4/06