

LITTLE WONDER®

HPV

HIGH PERFORMANCE VAC™

FELT BAG LINER KIT (600050) ASSEMBLY INSTRUCTIONS


Contents of Felt Bag Liner Kit Include:

Felt Bag Liner (600197)

Velcro Hook Strip (600161)

Instructions (600711)

The **Felt Bag Liner** (600197) is designed to work in conjunction with the **Debris Bag** and **Band Clamp** (600176 & 600177) to filter out dust and small particle of debris from the discharge air stream of the HPV vacuum. Included with the **Felt Liner** is a Velcro Hook Strip (600161). The **Felt Liner** has a Velcro Loop Strip sewn on each side to help hold it in place.

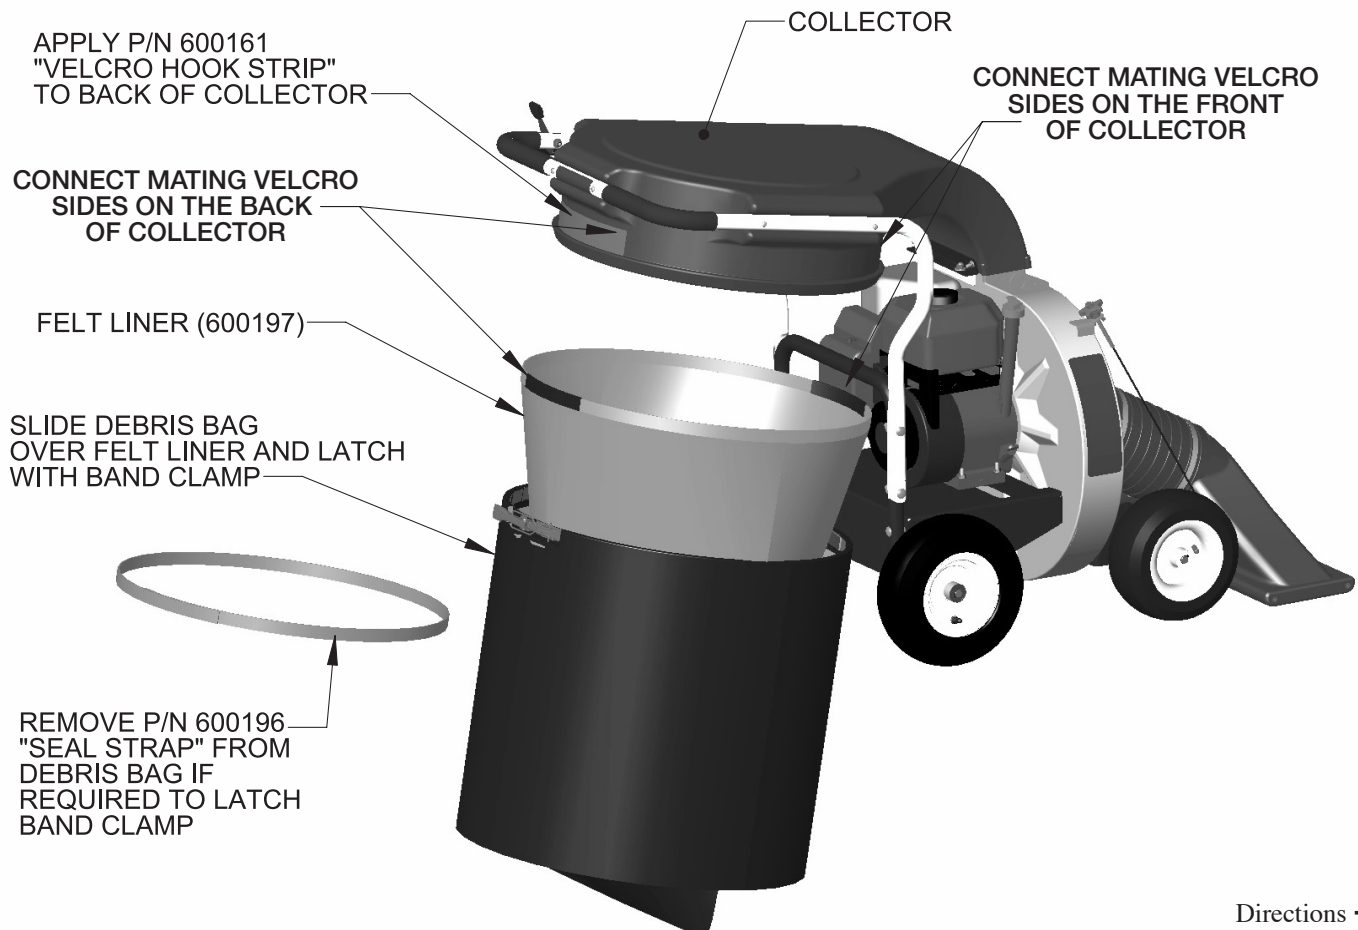

Directions:

1. Remove the **Debris Bag** from the **Collector**.
2. Clean the back area of the **Collector** above the lip to remove any dirt and debris with a damp cloth and allow it to dry thoroughly.
3. Peel off the backing to the **Velcro Hook Strip** and attach it to the back of the collector directly above the lip.
4. Attach one side of the **Felt Liner** to the **Velcro Hook Strip** on the front of the **Collector**.
5. Pull the **Felt Liner** over the lip of the **Collector** and attach the Velcro on the opposite side of the **Felt Liner** to the back of the **Collector**.
6. Slip the **Debris Bag** over the **Felt Liner** and latch the **Band Clamp** over the lip of the **Collector**. Adjust the wire form on the **Band Clamp** as required for a secure fit. It may be necessary to remove the “**Seal Strap**” from the **Debris Bag** in order to close the **Band Clamp**.

Do not use **Felt Liner** when vacuuming wet debris; this will dramatically decrease the airflow through the system.

Expect some amount of suction loss when using the **Felt Liner**.

Alternate the front/back orientation of the **Felt Liner** when it is attached to the **Collector** to maximize the wear life of the part.

Periodically turn the **Felt Liner** inside out before attaching it to the **Collector**. This will help to clean out the pores of the fabric and minimize suction loss of the machine.

LITTLE WONDER®
DIVISION OF SCHILLER-PFEIFFER, INCORPORATED
1028 STREET ROAD, P.O. BOX 38
SOUTHAMPTON, PA 18966
PHONE 877-596-6337 • FAX 215-357-8045
877-LWONDER
www.littlewonder.com